

PARKING BRAKE

The scooter is equipped with a parking brake.

To Apply the Parking Brake:


Pull in the parking brake lever (1) to lock the rear wheel.

To Release the Parking Brake:


Release the parking brake lever (1) while lightly pulling in the lever.

Before riding, check that the parking brake indicator is turned OFF and make sure that the rear brake is fully released so there is no drag on the rear wheel.

To apply

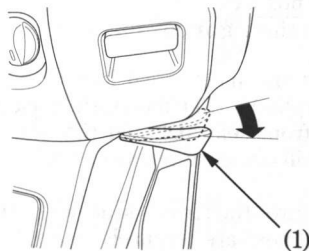

To release

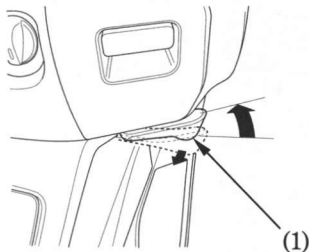

(1) Parking brake lever