


To Remove:

1. Open the right console box.
2. Remove the screw (3) and collar (4).
3. Pull out the right console box.

To Install:

- Installation can be done in the reverse order of removal.

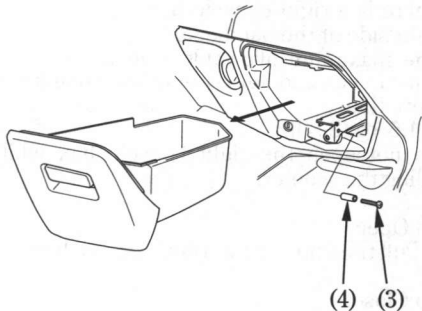

- (3) Screw
- (4) Collar