

BODY COVER


The right and left body covers can be removed in the same manner.

Removal:

1. Remove the rear body lower cover (page 111).
2. Remove the floor side panel (page 112).
3. Remove the body cover (1) by removing the clip (2), bolt (3) and screw (4).

Installation:

- Installation can be done in the reverse order of removal.

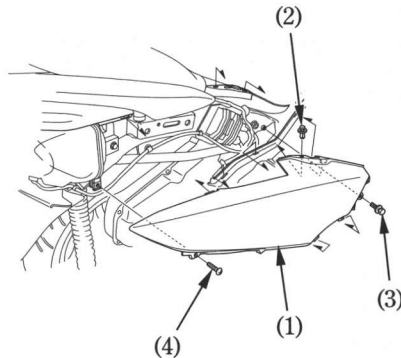

(1) Body cover

(2) Clip

(3) Bolt

(4) Screw