


HEADLIGHT AIM VERTICAL ADJUSTMENT

Remove the maintenance lid (page 177).

Vertical adjustment can be made by turning
the knob (1) in or out as necessary.
Obey local laws and regulations.

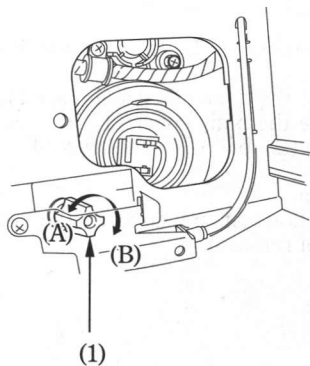

(1) Knob

(A) Up

(B) Down