


3. Enter operating range with the Honda smart card key.
4. Make sure that the engine stop switch is at  (RUN).
5. Push the ignition switch (2) once and turn to ON.


Confirm the following:

- The PGM-FI malfunction indicator lamp (MIL) is OFF.
- The parking brake indicator is ON.
- The low oil pressure indicator is ON.
- The high coolant temperature indicator is OFF.
- The Honda smart card key indicator is OFF.

The low oil pressure indicator should go off a few seconds after the engine starts. If the low oil pressure indicator lights during operation, stop the engine immediately and check the engine oil level.

#### NOTICE

Operating the engine with insufficient oil pressure can cause serious engine damage.

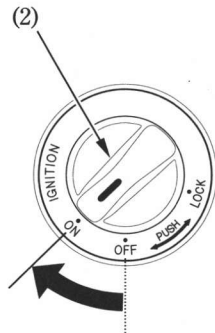

(2) Ignition switch