


AIR CLEANER

Refer to the Safety Precautions on page 139.

The air cleaner should be serviced at regular intervals (page 141). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the rear body lower cover (page 111).
2. Remove the right floor side panel (page 112).
3. Remove the right body cover (page 113).
4. Remove the air cleaner cover (1) by removing the screws (2).
5. Remove the air cleaner (3).
6. Discard the air cleaner.

7. Install a new air cleaner.
Use the Honda Genuine air cleaner or an equivalent air cleaner specified for your model. Using the wrong Honda air cleaner or a non-Honda air cleaner which is not of equivalent quality may cause premature engine wear or performance problems.
8. Install the removed parts in the reverse order of removal.

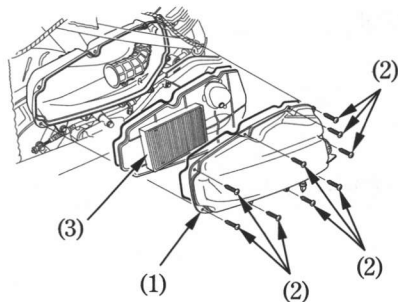

(1) Air cleaner cover
(2) Screws

(3) Air cleaner