



BELT CASE AIR CLEANER

Refer to the Safety Precautions on page 139.

1. Place the scooter on its center stand.
2. Remove the left floor mat (1).
3. Lower the side stand.
4. Carefully remove the left floor skirt (2) by removing the screws A (3) and clip (4) (page 150).

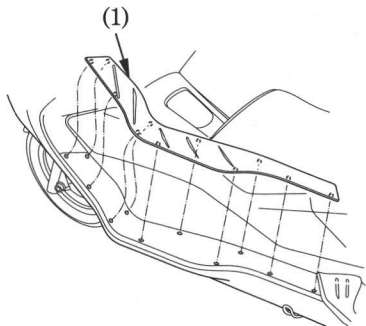

(1) Left floor mat

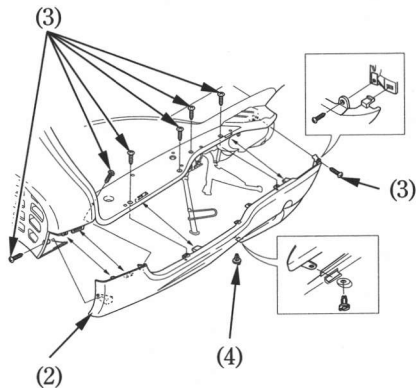

5. Remove the rear body lower cover (page 111).
6. Remove the left floor side panel (page 112).
7. Remove the left body cover (page 113).

(2) Left floor skirt
(3) Screws A

(4) Clip