


8. Remove the left floor step (5) by removing the bolts A (6), bolt B (7), screws B (8) and hooks (9).

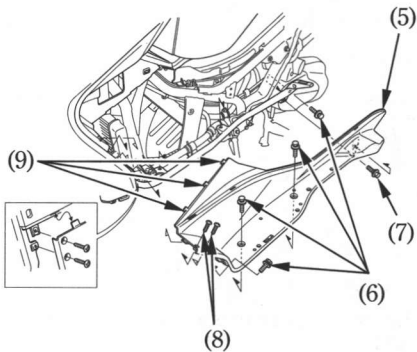


(5) Left floor step
(6) Bolts A
(7) Bolt B

(8) Screws B
(9) Hooks

9. Remove the left front side cover (10) by removing the bolts C (11) and bolt D (12).

10. Remove the left side outer cover (13) by removing the bolt E (14).

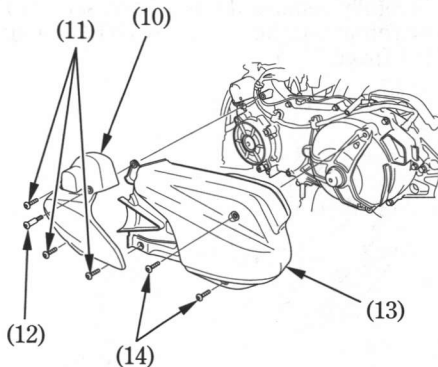

(10) Left front side
cover
(11) Bolts C

(12) Bolt D
(13) Left side outer cover
(14) Bolts E