

SPARK PLUG

Refer to the Safety Precautions on page 139.

Recommended plug:


LMAR8A-9 (NGK)

NOTICE

Never use a spark plug with an improper heat range. Severe engine damage could result.

1. Remove the left floor side panel (page 112).
2. Disconnect the spark plug cap (1) from the spark plug.
3. Clean any dirt from around the spark plug base.

Remove the spark plug using a spark plug wrench furnished in the tool kit.

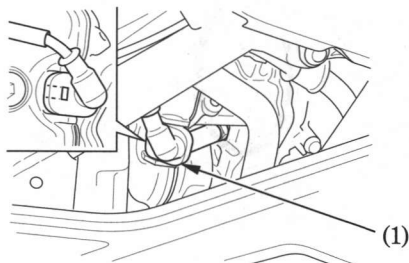

(1) Spark plug cap