

Headlight Bulb


Left headlight:

- Remove the left console box (page 110).
- Remove the maintenance lid (1) by removing the clip (2) (page 151).

Right headlight:

- Remove the right console box (page 108).
- Remove the maintenance lid (1) by removing the clip (2).

The right and left maintenance lids can be removed in the same manner.

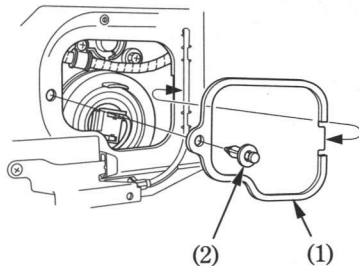

- (1) Maintenance lid
- (2) Clip