

ADJUSTABLE BACKREST




The seat is equipped with a backrest (1) which allows the seat to be adjusted according to the riders preference or physical condition.

To adjust:

Open the seat (page 39), remove the bolts (2) on the back and move the backrest back and forth according to the riders preference or physical condition.

NOTE:

- * After cleaning or running in the rain, wipe off water collected under the backrest before the scooter again.

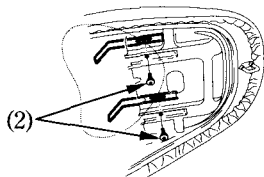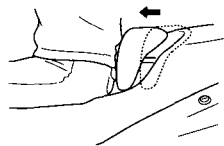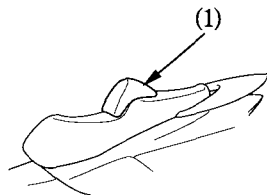

(1) Backrest

(2) Bolts