



Stop/Taillight Bulb

1. Remove the maintenance lid (1) and clips (2).
2. Turn the socket (3) 90° counterclockwise and remove it.
3. Pull out the bulb (4) without turning.
4. Install a new bulb in the reverse order of removal.

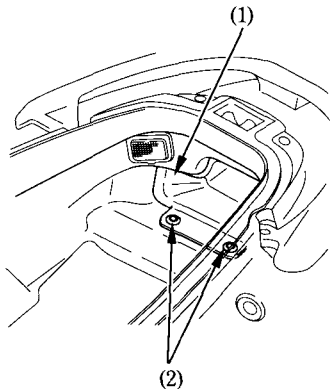

- (1) Maintenance lid
(2) Clips

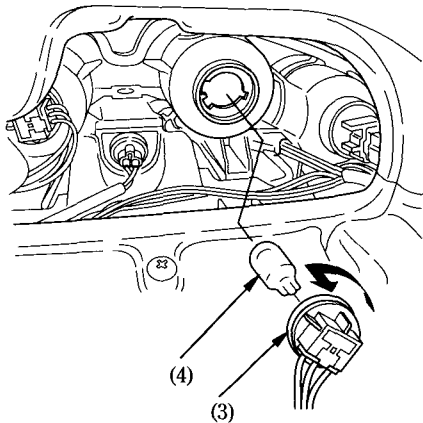

- (3) Socket
(4) Bulb