

## FUSE REPLACEMENT

(Refer to maintenance precautions on page 56). The main fuse (1), located on the starter magnetic switch (2) behind the rear cowl, is 30 A.

The spare main fuse (4) is located under the starter magnetic switch.

The fuse box (6) is located on the steering top bridge.

When frequent fuse failure occurs, it usually in-


dicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

### CAUTION:


\* **Turn the ignition switch OFF before checking or replacing the fuses to prevent accidental short-circuiting.**

To replace the main fuse (1), remove the side cover (page 39), disconnect the wire connector (3) and remove the old fuse.

Install a new fuse and reconnect the wire connector.

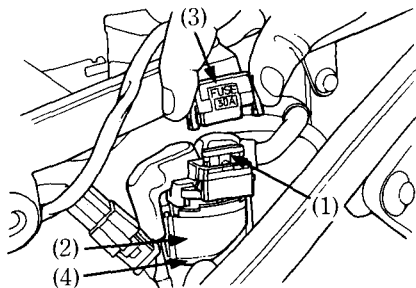

- (1) Main fuse                      (4) Spare main fuse  
(2) Starter magnetic switch  
(3) Wire connector

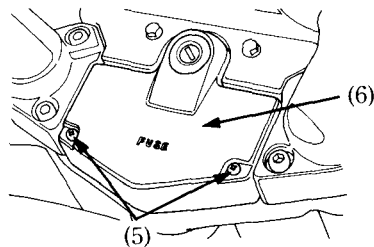

- (5) Screws                      (6) Fuse box