

Ref. No.	Description	Function
8	Coolant temperature warning light (red)	<p>Lights when the coolant is over the specified temperature. If the warning light goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 19–21 and do not ride the motorcycle until the problem has been corrected.</p> <p><b>CAUTION:</b>  * Exceeding maximum running temperature may cause serious engine damage.</p>
9	Tripmeter reset knob	Resets tripmeter to zero (0) by pushing the knob.
10	Tripmeter	Shows mileage per trip.
11	Left turn signal indicator (amber) (green: FI type only)	Flashes when the left turn signal operates.