



# ESSENTIAL INDIVIDUAL COMPONENTS

## IGNITION SWITCH

The ignition switch (1) is directly below the indicator panel.

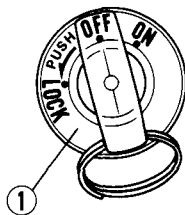

(F, ED, ND, G)  
(IIG, SP, FI)

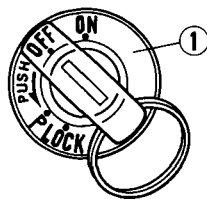

(DE)

(1) Ignition switch

| Key Position            | Function  | Key Removal            |
|-------------------------|---|------------------------|
| LOCK<br>(steering lock) | Steering is locked. Engine and lights cannot be operated.   | Key can be removed.    |
| P<br>(parking) (DE)     | For parking the motorcycle near traffic. The taillight and position light are on, but all other lights are off. The engine cannot be started. | Key can be removed.    |
| OFF                     | Engine and lights cannot be operated.   | Key can be removed.    |
| ON                      | The lights can be operated.<br>The engine can be started.   | Key cannot be removed. |