


- Remove the two bolts (3) securing the cover (4).
Remove the oil filter element (5).
- Check that the O-ring (6) on the oil filter cover is in good condition.

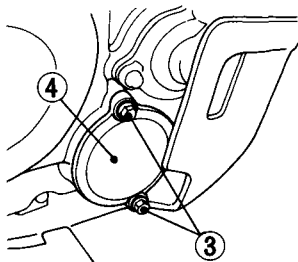

(3) Bolts

(4) Cover

- Insert a new oil filter element. Check that all parts are installed as shown.


CAUTION:

- * **Install the oil filter so that the rubber seal is positioned on the boss of the oil filter cover.**

Install the oil filter cover.

Oil Filter Cover Bolt Torque:

9 N·m (0.9 kg·m, 7 ft·lb)

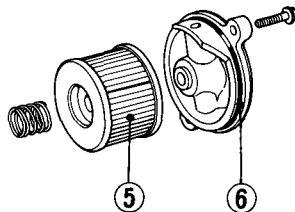

(5) Oil filter element

(6) O-ring