

(Ref. No.) Description	Function
(9) Tripmeter reset knob	Resets tripmeter to zero (0) by pushing the knob.
(10) Tripmeter	Shows mileage per trip.
(11) Side stand indicator (amber)	Lights when the side stand is put down. Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 33) is activated.