

FEATURES

(Not required for operation)

STEERING LOCK

(Except IG, IIG, ND, AR)


To lock the steering, turn the handlebars all the way to the left or right, turn the key (1) to LOCK while pushing in. Remove the key.

(IG, IIG, ND)

To lock the steering, turn the handlebars all the way to the right; turn the key (1) to LOCK while pushing in. Remove the key.

(AR)

To lock the steering, turn the handlebars all the way to the left or right, turn the key (1) to P or LOCK while pushing in. Remove the key.

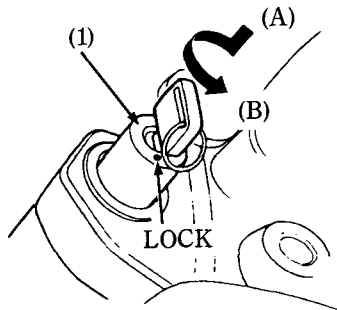

(1) Ignition key

(A) Push in
(B) Turn to LOCK

▲ WARNING

*** Do not turn the key to LOCK while riding the motorcycle; loss of vehicle control may result.**