

## FUSE REPLACEMENT

(Refer to the maintenance precautions on page 45).


The main fuse (2), located on the starter magnetic switch under the seat, is:

20A

The spare main fuse (3) is located under the starter magnetic switch.

The fuse box (5) is located lower the instruments. The specified fuses are:

10A, 15A

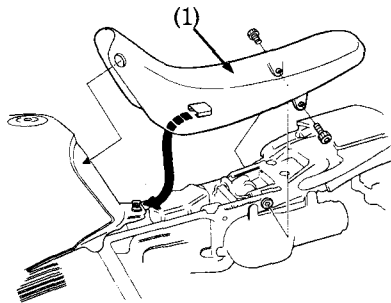

(1) Seat


74

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

### CAUTION:

**\* Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

The replace the main fuse (2), remove the side cover (page 46) and seat (1), disconnect the wire connector (4) of the starter magnetic switch and pull out the old fuse. Install a new fuse and reconnect the connector.

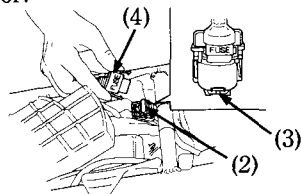

(2) Main fuse

(3) Spare main fuse

(4) Wire connector