

CONTENTS

SERIAL NUMBER LOCATION	4
CONTROL LOCATIONS	5
OPERATING INSTRUCTIONS	8
Engine stop switch	8
Front brake lever	8
Rear brake lever	9
Gear change pedal	9
Choke lever	10
FUEL AND OIL	11
Fuel tank	11
Fuel valve	11
Engine Oil Recommendation	12
Viscosity	12
PRE-RIDING INSPECTION	13
STARTING ENGINE	13
RIDING TIPS	14
CARRYING TIPS	15