


Clutch

This motorcycle incorporates an automatic centrifugal clutch. Perform the clutch adjustment by the following procedure.

1. Clutch must be adjusted with the engine shut off. Loosen the clutch adjuster lock nut ①.
2. Turn the clutch adjuster ② clockwise about one turn; do not turn excessively.
3. Next, slowly turn the clutch adjuster counterclockwise and stop when the screw starts to turn heavy.
4. From this point, back off the adjuster in the clockwise direction 1/4 to 1/3 turn, and then tighten the lock nut.
5. Check to make sure that the clutch operates properly after adjustment.
 - 1) The engine should start easily with the kick starter without the clutch slipping.
 - 2) When changing gear, the clutch operation should be smooth and

light, especially when shifting down in gear to the neutral position.

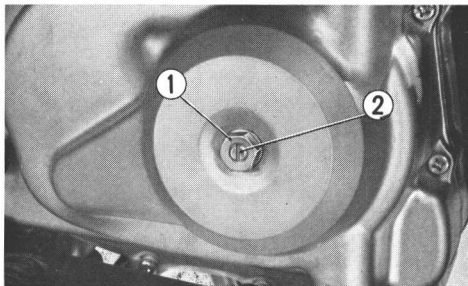

- ① Clutch adjuster lock nut
- ② Clutch adjuster