


## Rear Wheel Removal

Removal of the rear wheel is performed in the following manner.

1. Place the motorcycle on a support block under the engine to raise the rear wheel off the ground.
2. Unscrew the drive chain adjusting nut ① and rear wheel axle nut ②.
3. Remove the chain joint clip and drive chain.
4. Unscrew the rear brake adjusting nut ③ and separate the rear brake cable from the rear brake arm.
5. Pull out the rear wheel axle ④ and then the rear wheel can be disassembled from the frame.
5. Installation of rear wheel is performed in the reverse order of described above.

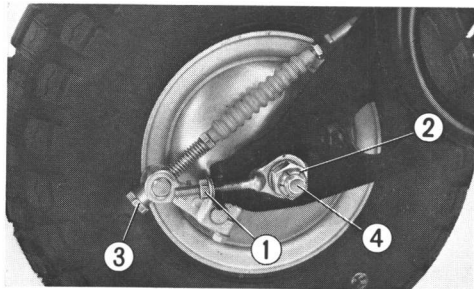

- ① Drive chain adjusting nut
- ② Rear wheel axle nut
- ③ Rear brake adjusting nut
- ④ Rear wheel axle