
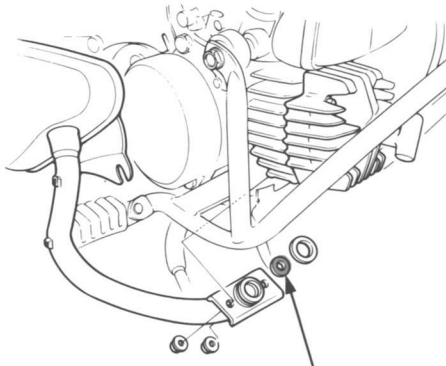


• THROTTLE LIMITER

The limiter restricts the throttle opening according to the degree the adjuster is turned. To adjust, loosen the adjuster lock nut and turn the adjuster. Tighten the lock nut securely.

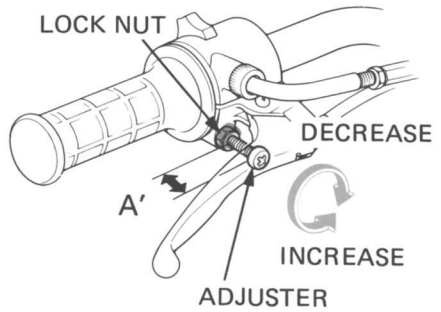

POWER LIMITER

• POWER LIMITER

The unit imposes a limit on the output of the engine.

Use these controls according to the skill and maturity of your son or daughter as follows:

- (1) Do not adjust the throttle limiter or remove the power limiter from the beginning. (The throttle limiter is factory adjusted so that the distance A' is 18 mm (0.7 in). The power limiter is installed in the inlet flange of the exhaust pipe).
- (2) Remove the power limiter, then adjust the throttle limiter by turning the adjuster in according to the skill and maturity of your son or daughter when he or she is thoroughly familiar with the motorcycle's controls and their functions.

⚠ WARNING

- * Do not remove the power limiter or adjust the throttle limiter from the start, or you may endanger your son or daughter.
- * The throttle is fully open when the distance A' is 18 mm (0.7 in).
- * Do not remove the adjuster from the throttle limiter.