


INNER COVER

Removal:

1. Remove the trim clip (1).
2. Remove the two bolts (2).
3. Remove the inner cover (3).

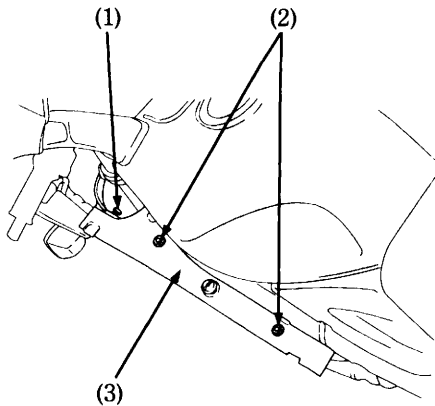

(1) Trim clip
(2) Bolts

(3) Inner cover