


AIR CLEANER

(Refer to the maintenance precautions on page 67).

The air cleaner should be serviced at regular intervals (page 61). Service more frequently when riding in unusually wet or dusty areas.

1. Raise the fuel tank and support it with the rod (page 49).
2. Disconnect the vacuum tube (1).
3. Remove the air cleaner housing cover (2) by removing the seven screws (3).

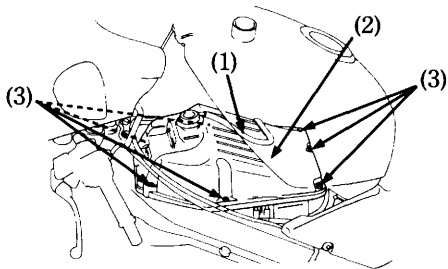

(1) Vacuum tube

(3) Screws


(2) Air cleaner housing cover

4. Take out the air cleaner (4) and discard it.

5. Install the new air cleaner.

Use the Honda genuine air cleaner or an equivalent air cleaner specified for your model. Using the wrong Honda air cleaner or a non-Honda air cleaner which is not of equivalent quality may cause premature engine wear or performance problems.

6. Install the removed parts in the reverse order of removal.

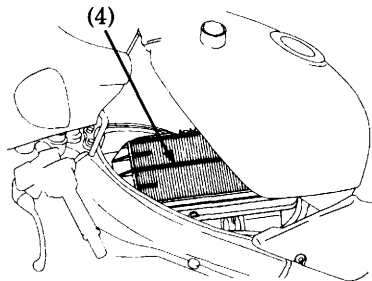

(4) Air cleaner