


1. Place the scooter on its center stand.
2. Lock the rear wheel by squeezing the brake lever (1) and setting the lock lever (2).

## **⚠ CAUTION**

Contact with the spinning rear wheel can cause you to be hurt.

Set the rear brake lock when the scooter is on its center stand.

The electric starter will only work when the rear brake lever (1) is operated.

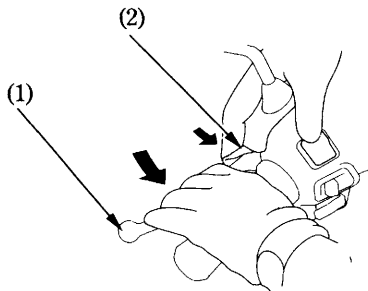

- (1) Rear brake lever  
(2) Lock lever