

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓		ODOMETER READING [NOTE (1)]				Refer to page
		NOTE	MONTH	x1,000 km				
				x 1,000 mi				
* DRIVE BELT				1	4	8	12	—
				0.6	2.5	5	7.5	
					6	12	18	
* FINAL DRIVE OIL	(NOTE 4)			EVERY 8,000km (5,000mi)I EVERY 24,000km (15,000mi)R				—
BRAKE SHOE WEAR					I	I	I	79
BRAKE SYSTEM				I	I	I	I	—
* BRAKE LIGHT SWITCH					I	I	I	—
* BRAKE LOCK OPERATION				I	I	I	I	—
* HEADLIGHT AIM					I	I	I	40
** CLUTCH SHOES WEAR						I		—
* SUSPENSION					I	I	I	—
* NUTS, BOLTS, FASTENERS				I		I		—
** WHEELS/TYRES					I	I	I	—
** STEERING HEAD BEARINGS				I			I	—