

SECONDARY AIR SUPPLY SYSTEM

Refer to the Safety Precautions on page 61 .


Air filter cleaning

The air filter should be serviced at regular intervals (page 63). Service more frequently when riding in unusually wet or dusty areas.

1. Lift up the body cover (page 38).
2. Remove the air filter housing cover (1) by removing the screw (2).
3. Remove the air filter (3).
4. Wash the air filter in clean, nonflammable or high flash point solvent and let it dry thoroughly.

Never use gasoline or low flash point solvents for cleaning the air filter. A fire or explosion could result.

5. Soak the air filter in gear oil (SAE 80–90) until saturated, then squeeze out the excess oil.
6. Install the removed parts in the reverse order of removal.

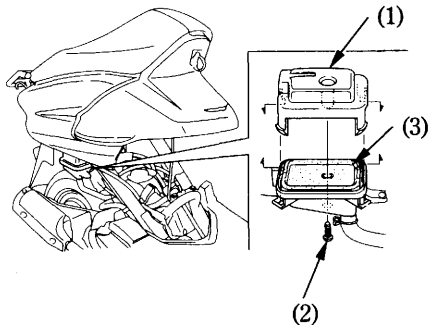

- (1) Air filter housing cover
(2) Screw

- (3) Air filter