


ENGINE OIL STRAINER SCREEN


1. Remove the oil filler cap/dipstick (page 22).
2. Place a drain pan under the crankcase and remove the oil drain plug (1).

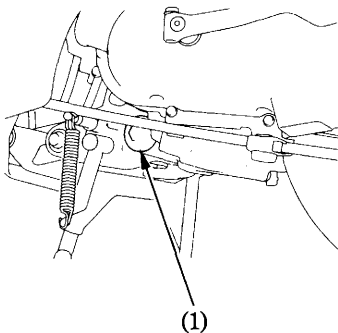

(1) Drain plug

The spring (2) and oil strainer screen (3) will come out when the drain plug is removed.

3. Clean the oil strainer screen.
4. Check that the oil strainer screen, sealing rubber and drain plug O-ring (4) are in good condition.

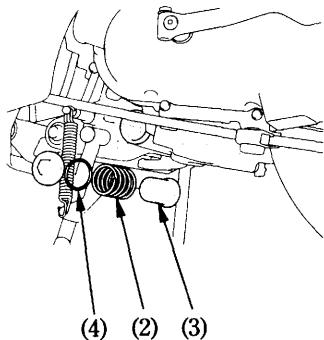

(2) Spring

(3) Oil strainer screen

(4) Drain plug O-ring