


in excellent condition, but it is recommended that a new master link be installed whenever the drive chain is reassembled.

6. Adjust the drive chain to the proper tension, following the instructions on page 39~40.


Front Brake Adjustment

Free play measured at the tip of the front brake lever ① should be maintained at 0.8~1.2 in. (20~30 mm). Each end of the

brake cable is provided with an adjuster. Major adjustments should be made using the adjuster located on the brake arm at the front wheel hub. Turn the adjusting nut ② clockwise to decrease free play or counterclockwise to increase free play. Minor adjustments can be made in a similar manner using the adjuster located on the brake lever mount at the handlebar. Loosen the lock nut ④, turn the adjuster ③ to obtain the specified free play, and retighten the lock nut.

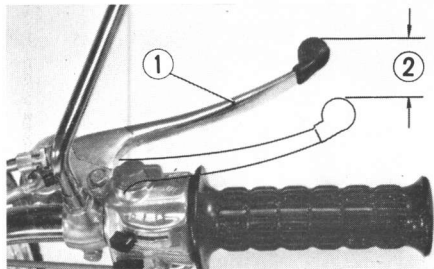

- ① Front brake lever
- ② Free play

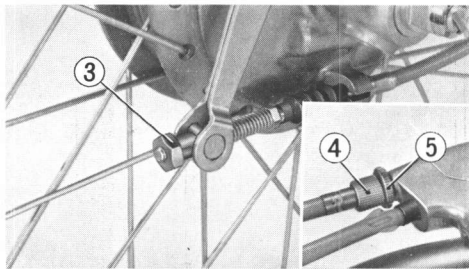

- ③ Front brake adjusting nut
- ④ Front brake cable adjuster
- ⑤ Lock nut