
Fuse box:

The fuse box is located under the left side cover.

The specified fuses are:

10A and 20A

10A, 15A and 30A (Model equipped with CBS/ABS/TCS)

1. Turn the ignition switch OFF before checking or replacing a fuse to prevent an accidental short circuit.
2. Remove the left side cover (page 71).
3. Open the fuse box cover.
4. Pull out the fuse. If the fuse is blown, install a new fuse.
Spare fuses are located in the fuse box.
5. Install the fuse box cover and left side cover.

