

## FEATURES (Not required for operation)

---

### SEAT

To remove the seat, insert the ignition key into the lock and turn it clockwise.

### CAUTION:

- *Be sure to securely lock the seat after installing it.*

