


# FRAME/WHEELS/BRAKES

---

## Installation Notes:

- Reassemble removed parts in the reverse order of removal. However, before tightening the axle holding bolt, tighten the axle nut to prevent misalignment.
- Before installing the rear wheel, check that the wheel hub and final drive gear splines are coated with grease.
- Be sure the splines on the wheel hub fit into the final gear case.

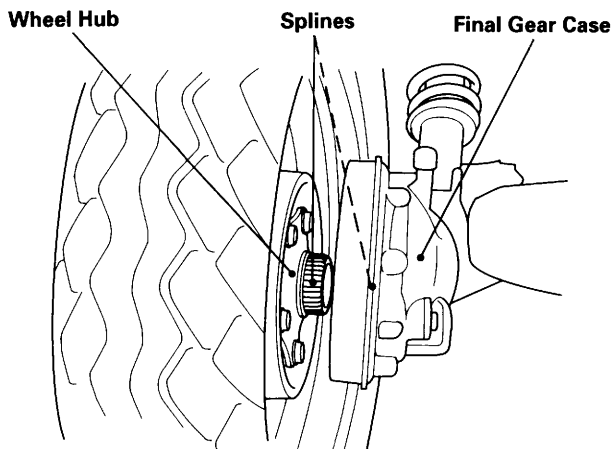

- Tighten and torque the following nuts and bolts:

**Axle nut torque:**

**108 N-m (11.0 kgf-m, 80 lbf-ft)**

**Axle holding bolt torque:**

**26 N-m (2.7 kgf-m, 20 lbf-ft)**

### **⚠ WARNING**

- ***If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.***
- Apply the brake several times and check for free wheel rotation when released.

(For model equipped with CBS/ABS/TCS)

- Brake system inspection (See page 94).

### **CAUTION:**

- ***After installation, operate the brake pedal and check the brake operation.***