

Current Fuel Consumption

Indicates the momentary fuel consumption of each 15 seconds during engine operation. With motorcycle speed 5 km/h or below “-” is displayed.

The indicated fuel consumption may differ from the actual fuel consumption.

The E type uses mile/ℓ or km/ℓ, the ED, F and U type in km/ℓ or ℓ/100 km.

When “-” blinks, go to your Honda dealer.

Current fuel consumption



Average Fuel Consumption

The average fuel consumption after reset until that moment is indicated every 15 seconds.

The indicated fuel consumption may differ from the actual fuel consumption.

The E type uses mile/ℓ or km/ℓ, the ED, F and U type in km/ℓ or ℓ/100 km.

When “-” blinks, go to your Honda dealer.

Average fuel consumption



To reset average fuel consumption:

Press and hold the FCD/H button for more than 2 seconds with the display in the average fuel consumption.

