

ITEMS	FREQUENCY	WHICHEVER → COMES		ODOMETER READING [NOTE (1)]								Refer to page
		FIRST	× 1,000 km	1	6	12	18	24	30	36		
		↓	× 1,000 mi	0.6	4	8	12	16	20	24		
		NOTE	MONTH		6	12	18	24	30	36		
* FUEL LINE					I		I		I	—		
* THROTTLE OPERATION					I		I		I	94		
* AIR CLEANER	2					R			R	86		
SPARK PLUGS					I		R		I	92		
* VALVE CLEARANCE					EVERY 24,000 km (16,000 mi) I					—		
ENGINE OIL			R		R		R		R	87		
ENGINE OIL FILTER			R		R		R		R	89		
* ENGINE IDLE SPEED			I	I	I	I	I	I	I	95		
RADIATOR COOLANT	3				I		I		R	96		
* COOLING SYSTEM					I		I		I	—		
* SECONDARY AIR SUPPLY SYSTEM					I		I		I	—		
FINAL DRIVE OIL					I		I		R	97		
BRAKE FLUID	3			I	I	R	I	I	R	30, 32		
BRAKE PAD WEAR				I	I	I	I	I	I	108		
BRAKE SYSTEM			I		I		I		I	109		
* BRAKELIGHT SWITCH					I		I		I	—		
* HEADLIGHT AIM					I		I		I	—		
CLUTCH SYSTEM					I		I		I	—		
CLUTCH FLUID	3			I	I	R	I	I	R	33		
SIDE STAND					I		I		I	99		
* SUSPENSION					I		I		I	98		
* NUTS, BOLTS, FASTENERS			I		I		I		I	—		
** WHEELS/TYRES					I		I		I	—		
** STEERING HEAD BEARINGS			I		I		I		I	—		