


OPERATING INSTRUCTIONS

ELECTRICAL CONTROLS

Speedometer : The speedometer ① is located on the headlight case and odometer ② incorporated in the speedometer indicates total distance travelled. The gear speed range indicators ③ are curved bars shown on the speedometer dial plate to indicate the recommended operating range of the respective gears. The neutral indicator light (green) ④ is located at the right side of the speedometer.

This light will be on when the transmission is in the neutral position.

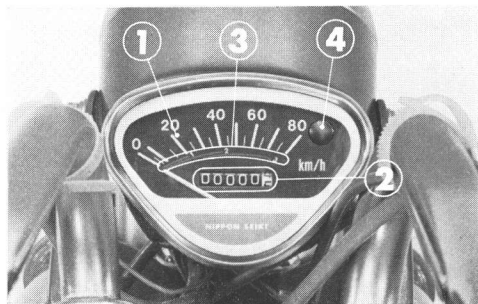

- ① Speedometer
- ② Odometer
- ③ Gear speed range indicators
- ④ Neutral indicator light