


**Headlight Beam Control Switch:** The headlight beam control switch ① is located on the left handle grip switch housing.

“L” is low beam position (low beam light and tail light on). “H” is high beam light and tail light on.


The headlight will only operate when the main switch is in the on position (refer to page 16).

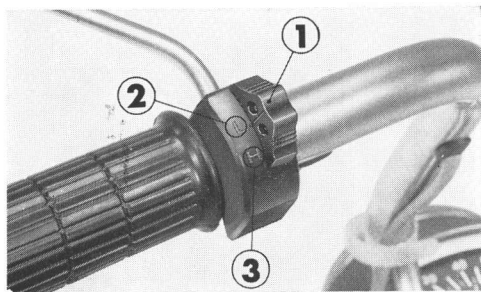

- ① Headlight beam control switch
- ② “L” position
- ③ “H” position

**Turn Signallight Control Switch:** The turn signallight control switch ① is located on the right handle grip switch housing. For making a left turn, move the switch to the “L” position, and to the “R” when making a right turn.

**Horn Button:** The horn button ② is located below the turn signal control switch.

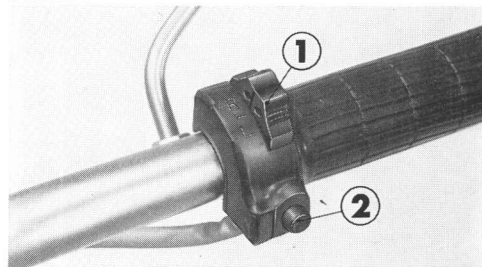

- ① Turn signal control switch
- ② Horn button