


FUEL AND OIL

Fuel Tank: The fuel tank ① is located under the seat.

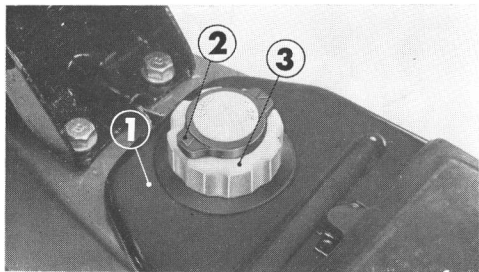

- ① Fuel tank
- ② Fuel tank valve
- ③ Fuel tank cap

The fuel tank capacity is 2.5 liter (0.7 U.S. gal., 0.6 Imp. gal.) including 0.5 liter

(1.0 U.S. pt., 0.9 Imp. pt.) in the reserve supply.

NOTE: Low lead fuel with an octane rating of 85 or above must be used. Do not mix oil with the fuel.

Fuel Tank Cap: The fuel tank cap ③ has a fuel tank valve ② with “ON” and “OFF” position to open or close the tank vent.

The fuel tank valve should be turned to “ON” to allow fuel to flow when running the engine.