


**Stoplight Switch:** The stoplight switch adjustment is made at the stoplight switch ② located on the right side toward the rear of the engine.

1. First check the adjustment of the rear brake pedal in accordance with the procedure on page 48 to make sure that the brakes are properly adjusted.
2. Turn on the main switch.
3. Adjust the stop light switch ② so that the stop light will come on when the brake pedal is depressed to the point where the brake just starts to take hold. If the stop light switch is late in switching on the stop light, screw in ① the switch adjusting nut and if the stop light comes on too early screw out ② the switch adjusting nut.

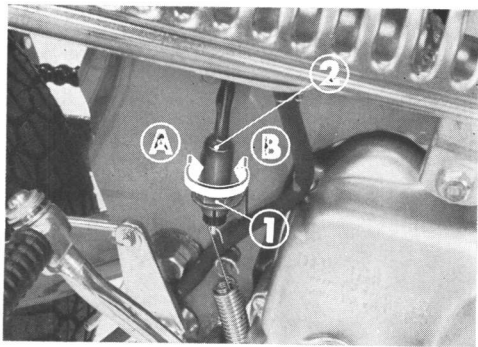

- ① Adjusting nut  
② Stoplight switch