


## OPERATING INSTRUCTIONS

### Speedometer

The speedometer ① is mounted on the head light case. Instrument and indicator light functions are shown in the adjacent table.

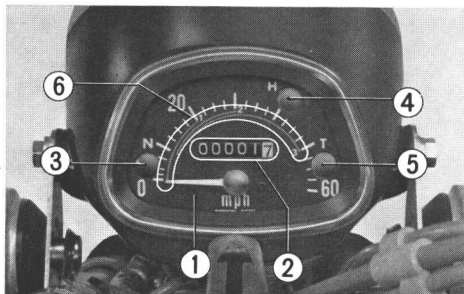

Ref. No.	Description	Function
1	Speedometer	Indicates driving speed.
2	Odometer	Indicates total accumulated distance traveled.
3	Neutral indicator lamp (green)	Lamp will be on when the transmission is in neutral.
4	High beam indicator lamp (blue)	Lamp will be on when headlight is on high beam
5	Turn signal indicator lamp (amber)	Lamp flashes when either turn signal light is operating.
6	Gear speed range indicators	Indicates proper speed for each gear.