

Fuel Tank

The fuel tank is located under the seat. The seat can be opened by releasing the seat latch ①.

Fuel tank capacity is 0.7 US gal. including 0.1 US gal. in the reserve supply. The fuel tank cap ② is removed by twisting counterclockwise. Use low-lead or regular gasoline with a Research Octane number of 91 or higher or a Pump Octane number of 86 or higher.


When refueling, take care to exclude dirt, water or other contaminants from the fuel tank.

NOTE:


Pump Octane is the octane formula specified by the Cost of Living Council.

WARNING:

Gasoline is flammable and explosive under certain conditions. Always stop the engine and do not smoke or allow open flames or sparks near the motorcycle when refueling or draining fuel.

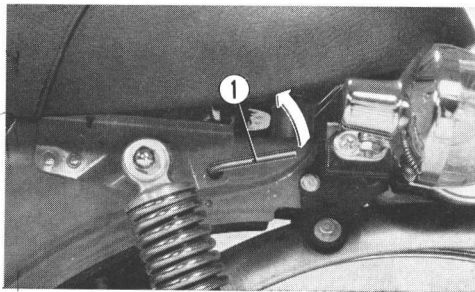

① Seat latch

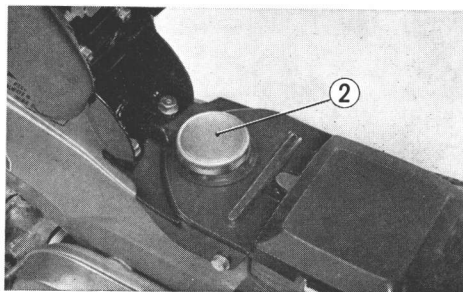

② Fuel tank cap