


Cam Chain Adjustment


Too tight or too loose a cam chain will adversely affect the engine. Make tension adjustment while the engine is idling.

1. To adjust, loosen the lock nut ① and loosen tensioner adjusting bolt ② approximately one half turn.
2. If the chain is still noisy even after the above adjustment, remove the

engine protector, loosen 14 mm sealing bolt located at the left bottom side of the crankcase, and screw in the tensioner bolt ③ gradually until it is no longer noisy. After completing the adjustment, tighten the tensioner adjusting bolt lock nut and 14 mm sealing bolt.

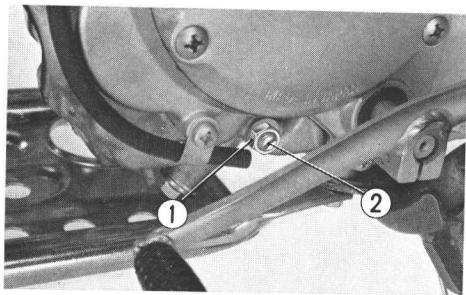

- ① Tensioner adjusting bolt lock nut
② Tensioner adjusting bolt

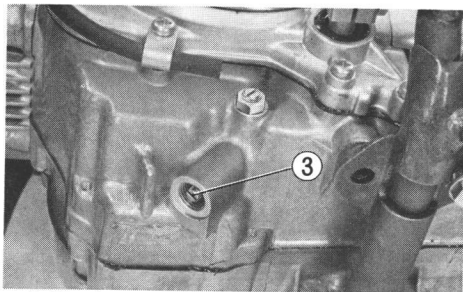

- ③ Tensioner bolt