


Clutch Adjustment

1. The clutch is adjusted with the engine off. Loosen the adjuster lock nut ①.
2. Turn the clutch adjuster ② clockwise about one turn.
3. Turn the adjuster counterclockwise and stop when the screw meets resistance.
4. From this point, back the adjuster off clockwise 1/8 to 1/4 turn, and tighten the lock nut.

Make sure that the clutch operates properly after adjustment.

- The engine should start easily with the kick starter without the clutch slipping.
- When shifting gears, the clutch action should be smooth and light, especially when shifting to the neutral position.

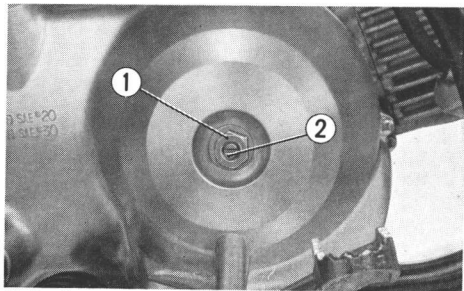

- ① Lock nut
② Clutch adjuster