


Headlight Beam Adjustment

The headlight must be kept properly adjusted for safe nighttime riding.

Vertical adjustment is made by pivoting the headlight case on its mounting bolts ①. Horizontal adjustment is made by turning the adjusting screw ② located on the headlight rim.

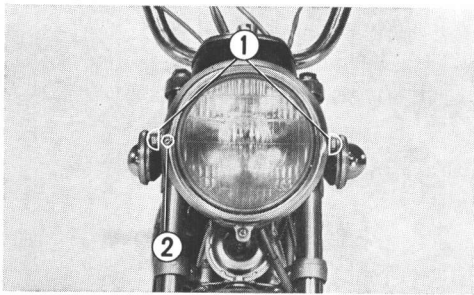


- ① Headlight mounting bolts
- ② Adjusting screw

Stoplight Switch Adjustment

The stoplight switch adjustment is performed with the stoplight switch ③ located on the right side near the rear of the engine.

1. First check the adjustment of the rear brake pedal in accordance with the procedure on page 53 to make sure that the brake is properly adjusted.
2. Turn the main switch "ON" (red dot position).
3. Adjust the stoplight switch so that the stoplight will come on when the brake pedal is depressed to the point where the brake just starts to engage. If the stoplight comes on too late, turn the switch adjusting nut ④ in direction A. If the stoplight comes on too early, turn the adjusting nut in direction B.

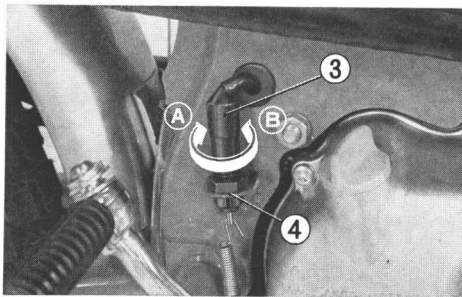

③ Stoplight switch

④ Adjusting nut