


## Fuel Filter Maintenance


The fuel filter is incorporated in the fuel valve which is mounted on the bottom of the fuel tank at the left side. Accumulation of dirt in the filter will restrict the flow of the fuel and cause the carburetor to malfunction, therefore, the fuel filter should be serviced periodically.

1. Turn the fuel valve lever ① to the "OFF" position.

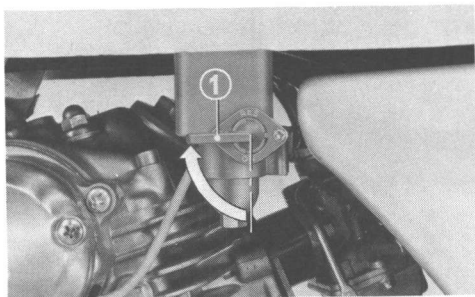

① Fuel valve lever

2. Unscrew the fuel filter cap ②. Wipe all sediment from the inside of the cap.
3. Remove the "O" ring seal ③ and the filter screen ④. Clean the filter screen.
4. Reinstall the filter screen, "O" ring, and cap.
5. Turn the fuel valve lever to the "ON" position and check for leakage at the filter cap.

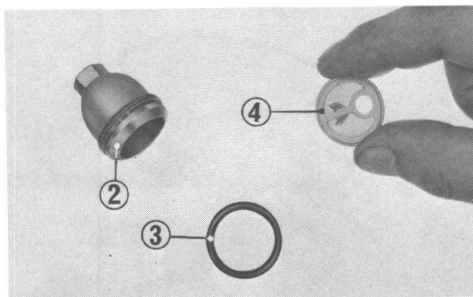

② Fuel filter cap  
③ "O" ring seal

④ Filter screen