


3. Pull the bulb ② out and replace.

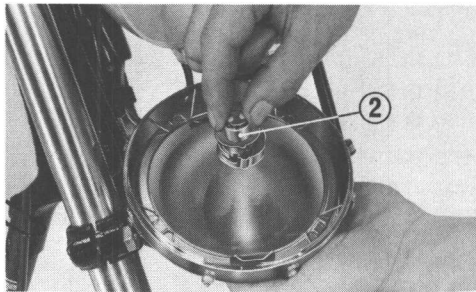


② Headlight bulb

Taillight Bulb Replacement

1. Remove the two screws retaining the taillight lens.
2. Press the bulb ① inward and twist to the left, and the bulb can be removed.
3. When installing the taillight lens, do not overtighten the screws.

CAUTION: If either light burns out, turn the headlight switch off immediately and replace the bulb, or the other bulb will burn out.

WARNING: The lighting equipment is not legal for highway use. Do not operate on public streets, roads or highways.

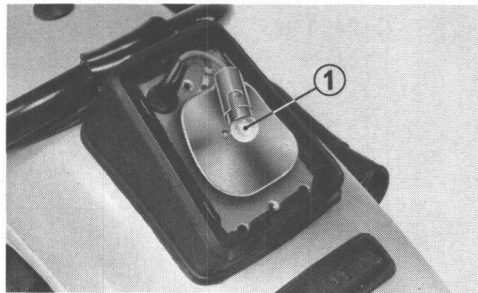

① Taillight bulb