

Tires – Check the air pressure and tires for wear or damage. (See page 24)

Throttle operation – Check the throttle operation, cable routing and free play. Correct or replace if necessary. (See page 100)

Lighting – See that all lights operate properly.

Drive chain – Check condition of drive chain and measure the chain tension. Adjust if the chain tension is incorrect. Lubricate if it appears dry. Replace if it is badly worn or damaged. (See page 108)