

MAINTENANCE

Engine Oil

Oil level check:

Check engine oil level each day before operating the motorcycle.

The oil filler cap (1) is at the rear of the right crankcase cover and has a dipstick for measuring the oil level. Oil level must be maintained between the upper (2) and lower (3) level marks on the dipstick.

1. With the motorcycle upright on level ground and its side stand extended, remove the oil filler cap/dipstick, wipe it clean, and reinsert the dipstick without screwing it in.
2. Add the specified oil up to the upper level mark, if required.
3. Install the filler cap/dipstick. Check for oil leaks.

CAUTION: Running the engine with insufficient oil can cause serious engine damage.

