

Oil centrifuge filter cleaning:

Clean the centrifuge filter after draining the oil.

1. Remove the skid plate.
2. remove the kickstarter pedal (1).
3. Disconnect the clutch cable from the clutch arm (2).
4. Remove the decompression cable clamp (3) and disconnect the decompression cable (4) from the cam follower arm (5).
5. Remove the bolt attaching the cam follower arm and remove the cam follower arm.
6. Remove the right crankcase cover.
7. Remove the rotor cover and clean any sludge from the center of the rotor (6) with a lint-free cloth.

