

Valve Tappet clearance

Checking or adjusting of the tappet clearance should be performed while the engine is cold.

1. Remove the seat (1) by removing the bolts (2).
2. Turn the fuel valve (3) to the "OFF" position and disconnect the upper fuel line (4) from the fuel valve.
3. Remove the fuel valve mounting bolt (5) and the fuel tank.

